

One Year Limited Warranty

The manufacturer warrants every Biffy product to be free from manufacturing defects under normal use for a period of one year from the date of purchase. This warranty is extended only to the original purchaser.

Terms of Warranty:

The American Biffy Company, Ltd. will repair or replace, at their discretion, products or parts found to be defective. Our liability is limited to repair or replacement only and we are not liable for consequential or incidental damages. There are no implies or expressed warranties. Shipping charges to the manufacturer are non-refundable.

Limitations of Warranty:

This limited warranty does not cover (1) Damage or loss sustained in a natural occurrence, i.e. earthquake, fire, etc., (2) Damage or loss due to improper installation, negligence, misuse or abuse and (3) Damage or loss resulting from foreign materials or chemicals in water supply.

Warranty Service:

To obtain warranty repair or replacement, contact manufacturer at:


American Biffy Company, Ltd.
674 Wells Road
Boulder City, NV 89005 USA
702-294-0055 Telephone
702-294-0649 Fax
Sales @biffy.com Email

Congratulations on your purchase of a Biffy®
"You'll Love Your Biffy®!"



Please Read ALL installation instructions carefully prior to installation.


Installation Tools Needed

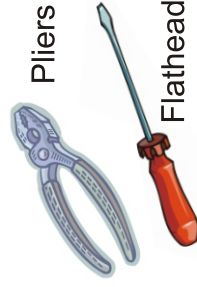

Pliers

Flathead

Parts included in Package

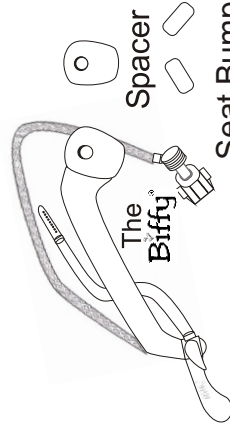

Spacer

Seat Bumpers

American Biffy® Company

Visit our website for new product news
www.biffy.com

U.S. Patent No. 5,933,881 & 6,487,732
Other U.S. And International Patents Pending

IMPORTANT: The Biffy® is designed for use with solid toilet seats. Soft, cushioned seats may restrict the use of the spray arm. We recommend replacing a soft, cushioned seat with a solid seat prior to installation.

Step 1- Remove Toilet Seat

Remove the toilet seat using a standard flathead screwdriver and pliers.



1

Step 2- Position the Biffy® on the rim of the toilet bowl & replace the seat

Align the Biffy® bracket with the left toilet seat hole. The spray arm will rest inside the toilet bowl rim. Place the spacer over the right seat hole and replace the toilet seat.




2

***DO NOT OVER TIGHTEN TOILET SEAT SCREWS**

Step 3- Connect to Water Supply

Turn off water supply at the wall. Unscrew the water supply line and insert the Biffy® T-adapter between the tank and the supply line and tighten all fittings. Hand tightening is usually sufficient.


***DO NOT OVER TIGHTEN FITTINGS
IF WATER TANK SUPPLY LINE IS TOO LONG, CUT
OR REPLACE LINE TO AN APPROPRIATE LENGTH.**

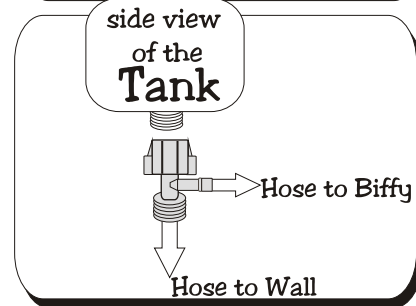

3


IMPORTANT: Check for any water leakage. To test the installation for leaks, run water through the Biffy® for 30 seconds. Consult a professional for installation assistance if necessary. As with all plumbing appliances, if your Biffy® is unattended for a great period of time, we advise the water supply be turned off.

Seat Bumpers

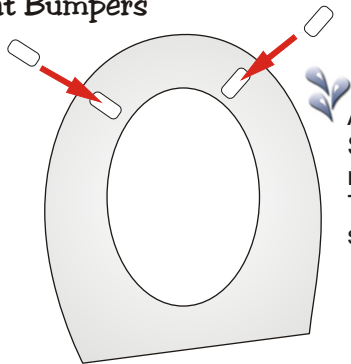

Attach the two supplied Seat Bumpers as shown to raise / level the seat. This is important to allow the spray arm to move freely.

Waterdrop Lever

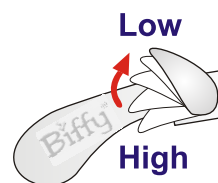

Adjust waterdrop lever on handle for water pressure control. Water drop lever is for adjusting the water spray: it is **NOT** an on/off valve.

Cleaning:

The Biffy® is easily cleaned with normal bathroom maintenance. To keep its shine, avoid abrasive cleaners.

Biffy®